





Sconce install guide



1. Once location on wall has been selected measure distance between the two key hole slots and mark on wall. Drill hole large enough to fit remote driver but small enough to be covered by light. Approx 40-60mm depending on selected driver option.
2. Mount 8 gauge screws (check head size in slot first) in to wall using appropriate anchors for wall type at the measured distance for chosen sconce.
3. Connect cables appropriately. The low voltage led driver needs to be accessible for maintenance purposes.
4. Power connection to supplied 24v remote driver must only be made by Licensed electrician.
5. Feed excess cable through hole and hang sconce by lining up matching slots to screws and gently pressing down in to place.

supplied remote 24v
dimmable driver

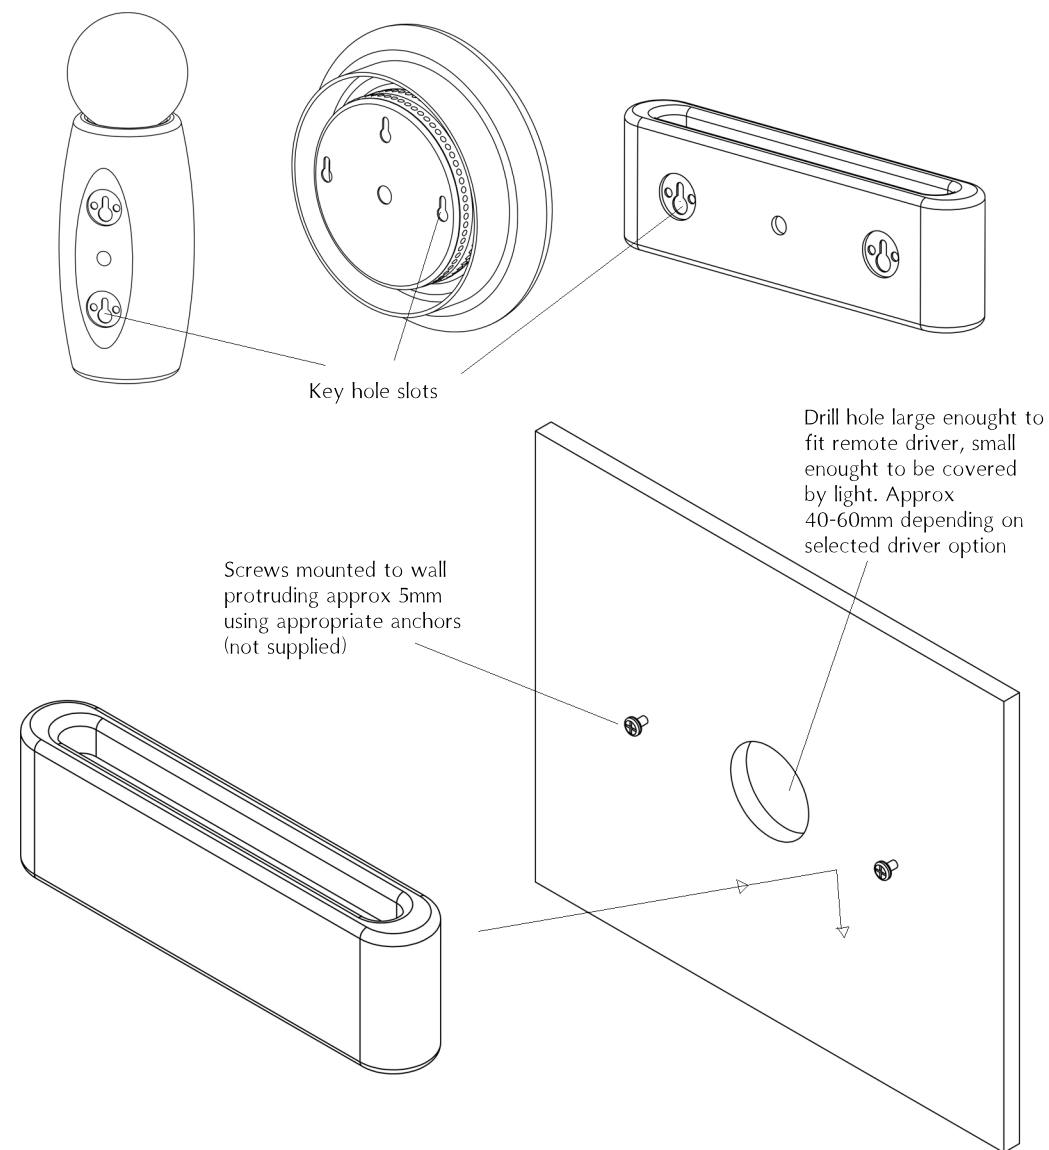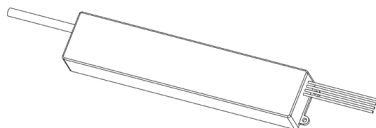

LIMITED WARRANTY

Products are sold with a limited warranty against manufacturer defects in materials and workmanship for a period of two years from the delivery date. This limited warranty does not extend to other materials supplied by the Buyer or damage caused by accident, abuse, misuse, negligence, cleaning, or normal wear and tear.

Sundown Lighting products are made from natural solid timber, appropriate care must be taken. As solid timber is a natural product, this guarantee does not cover minor movement of timber panels or pieces over time.

This warranty applies to the original Buyer only and is not transferrable.

Seller reserves the right to modify its limited warranty at any time in its sole discretion.

LIMITATION OF LIABILITY

Buyer is wholly responsible for obtaining a qualified installation professional to install the products. Seller expressly disclaims any obligation and/or liability arising from, relating to or in connection with the installation of products.